

# ASSEMBLY MANUAL: ROLLER SHADE FOR SKYLIGHTS

## ASSEMBLY


Assemble exactly according to this manual to prevent redundant assembly errors and other related problems.

### AIDS FOR ASSEMBLY:

- electric drill
- cross-head screwdriver
- knife, scissors, pliers
- allen key 1,5
- for clip fixation: screw 3x17

### CONTROL:

- before assembly we recommend to inspect all of the delivered parts of the goods to prevent any problems. The manufacturer must be notified of any defects or comments concerning the assembly of the blinds.
- never unfold the roller blind before assembly.
- remove all obstacles from the sky light that could prevent the assembly (plastic holders etc).

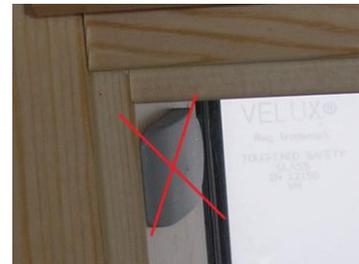

### ASSEMBLY:

- never unfold the roller blind before assembly.
- remove all obstacles from the sky light that could prevent the assembly.



### FIXATION OF CEILING CLIPS:

- place the angle clip to the upper edge of the window wing in the distance which delimit the clip end stop itself (see picture one).
- screw and then break off the exceeding parts, which defined the assembly depth (for plastic window use fore drilled holes – drill  $\varnothing$  2mm).



### FIXATION OF THE UPPER PROFILE:

- loose the stretching cords on the roller blind .
- assembly bases of the clip must be pressed to the side boards of the roller blind (see picture two).
- catch the upper profile and slip it frontally on the angle ceiling clips to make the end stop click (see picture three).





## GUIDING CHANNELS ASSEMBLY:

- insert the guiding channels under the upper profile, align them with the edge of the frame and screw them.
- pay attention that the stretching cords are not between the guiding channels and the window frame.

## FIXATION OF THE STRETCHING CORDS:

- clamp the stretching holders located on the ends of cords into the lower ends of the guiding channels.

## ADJUSTMENT OF THE ROLLER BLIND BRAKE:

- if necessary, the brake of the blind can be adjusted by setting the stretching cords - both of them must be stretched in the same level!!
- adjust the brake by moving the metal roller on the end of the cord. The following rule is always valid: the higher the stretching of the cord, the higher braking of the blind.
- the correctly adjusted brake holds the blind in any position when lifting.
- ATTENTION! - Too much stretching of the leading cords can damage the whole roller blind braking system.
- cut off the excess cord ends.

## COMPLETION:

- lower the blind by catching the lower bar into the lower part of the window and check the functionality.
- the blind is ready for good use.





## Demonstrative assembly of the R-lite roller blind

The roller blind is installed in agreement with safety elements of the norm EN 13120

