 


PLISSÉ

1. CONTROL

 
Lifting up

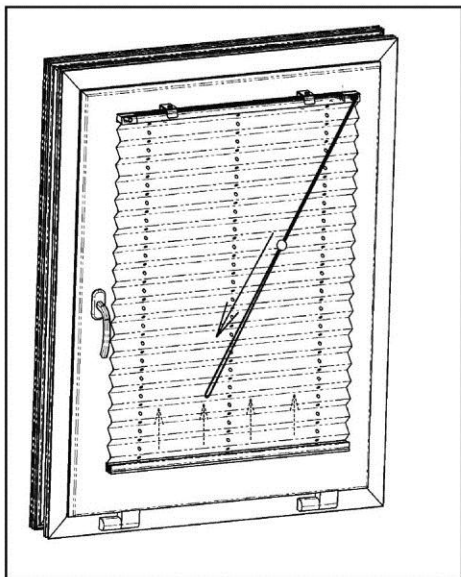


Securing in the requested position



Releasing the brake


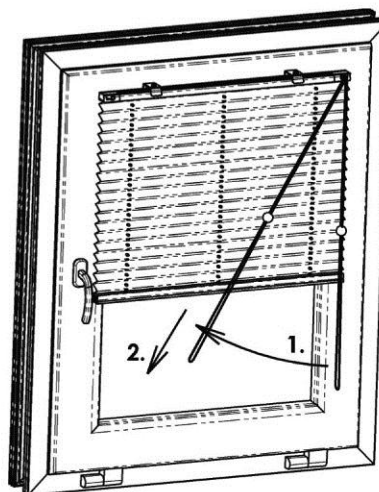


Lowering

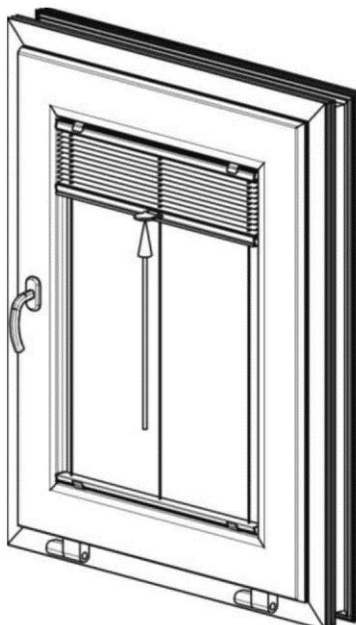 

DESCRIPTION OF THE CONTROL BY CORD/S AND THE BRAKE/S:

  For the lifting and lowering, it is necessary to release the brake by drawing the cord into the centre of the plissé. The fabric is secured in the requested position by diagonally drawing the cord to the side of the plissé.

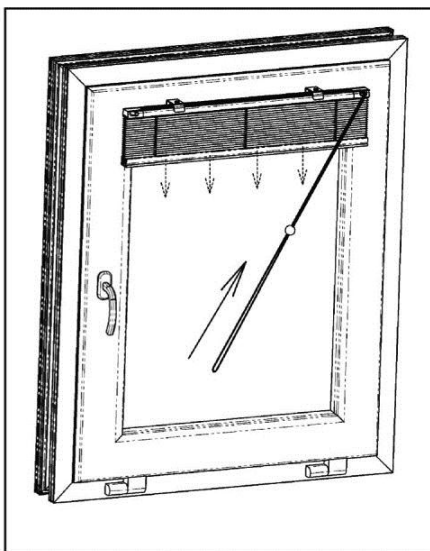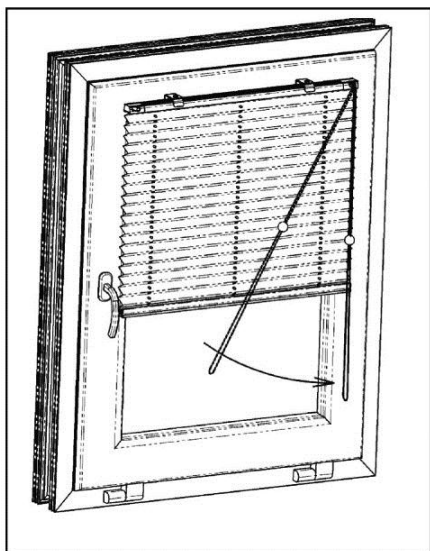

DESCRIPTION OF CONTROL BY HANDLE:

By pulling the handle in a downward direction, you can lower the plissé. By pushing the handle in an upward direction you can lift the plissé. The plissé can remain in any selected position. For difficult to access places (e.g. ceiling windows), the handle and the bar can be used as a control. Attach the adapter on the handle so it clicks. By drawing the bar you can lower downwards / by pressing then you can lift upwards. Then remove the adapter from the handle by moving to the side (sides). Note: This manner of control is valid for all forms of plissé (rectangular, square, triangle, bevelled, folding).

NOTIFICATION:

The handle can be set at several angles according to the location and access to the product. This setting is permitted immediately after installation and it is not recommended to change it. If this requirement is not kept there can be irreversible damage and devaluation of the product.

2. MAINTENANCE

The product does not require any extraordinary maintenance or lubrication of control mechanisms.

In the case of dirtying (dust), regularly use a fine brush or a slightly adjusted manual vacuum cleaner.

During common cleaning regularly wipe the surface with a cloth or a wet soft textile or sponge. Only use soap solutions without chemical ingredients at a temperature of up to 30°C.

Do not use aggressive detergents, such as organic solvents, cleaning sand, cleaning pastes, developing steams and strong alkali cleaning detergents.

NOTIFICATION:

 
Ensure careful cleaning of textiles to prevent jamming or other damage.

Fabric with a steaming layer must not be cleaned with water – the layer can be damaged.

When cleaning windows, set the product into a position to prevent damage and any interference while cleaning.

Protect the product against dirtying during reconstruction and painting.

3. SAFETY INSTRUCTIONS

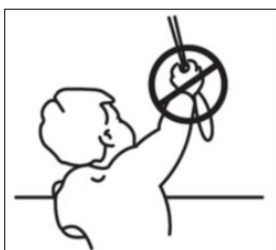

Important note

Pursuant to the EN 13 120 standard, we hereby call your attention to possible hazards posed by the use of pull cords and chains!

Safety instructions / strangulation hazard:

- Young children have been strangled by loops in pull-cords, chains and tapes, and cords that operate the product.
- To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.
- Move beds, cots and furniture away from window covering cords.
Install the enclosed safety components to make sure cords do not twist and create a loop.
- Do not use force when handling the product if any obstacle prevents its motion.
- Do not attach any items to the product (particularly on the lamellas, control cords, nylon and draw bars).
- Prevent mechanical stress and damage to the product.
- For products controlled by cords, keep cords out of the reach of children to prevent entangling and jamming.
- Handle the product carefully, especially during cleaning.
- Always secure the cord to the two wheels after each use (valid for AO and BO types)!

FOR PRODUCTS WITH MOTOR-DRIVEN DRIVES:

- To set the electric control of the product, follow the manual for this device that was delivered by the supplier.
- Do not allow children to play with the equipment. Keep the remote control out of the reach of children.
- Check the installation for damage to inlets.
- For the inspection or maintenance of electrical parts, the product must be disconnected in an appropriate manner from the electricity supply.

NOTIFICATION:

Electrical installation, assembly and maintenance must only be performed by fully-qualified persons who are authorized and capable of the stated actions.

In the case of a defect or mechanical damage to the product, prevent any further use.

NOTES:

- If the product is not functional, contact the seller or the firm which assembled the product.

- The display of the product may slightly differ from the actual version. The producer reserves the right to make changes.
- After the termination of the service life, do not dispose of in communal waste. Materials used can be separated and handed over in accordance with the valid regulations on waste and environmental protection.
Information on waste collection points can be obtained from the local administration office.