



Labona®

## Outdoor blinds in the prepared PurBox


Measuring instructions

# Measuring Exterior Blinds for the Prepared PurBox

If you have decided to first acquire a Purenit box and only later to purchase exterior blinds for the finished box, measure according to the following diagrams.

The measured blinds can then be ordered in a few quick steps on our e-shop.

*Note: If you are purchasing blinds for Purenit boxes at the same time, only follow the instructions for measuring the boxes - we will calculate the dimensions of the blinds for you.*

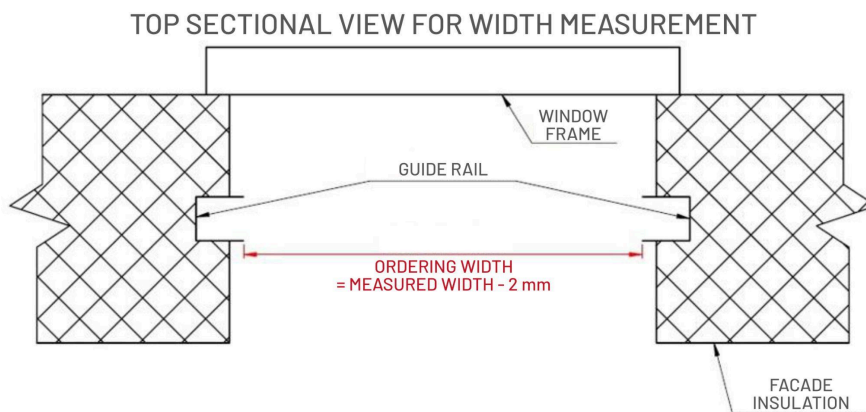


The dimension is always measured at 3 points. Subtract -2 mm from the smallest measured width and specify this dimension when ordering.

**Example: The width you measured is 1,508 mm. Therefore,  $1,508 \text{ mm} - 2 \text{ mm} = 1,506 \text{ mm}$  = the dimension to be entered into the configurator.**

Aluminum "U" profiles in the casing must not be submerged after the facade is completed; they must align with the casing or even protrude by 2 mm.

For measuring blinds on HS portals and other divided windows and entrances, follow the instructions in this diagram:

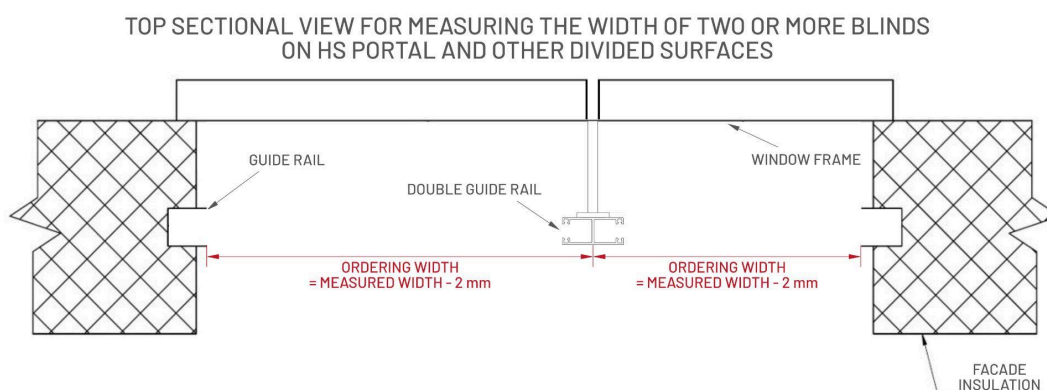

**Need some advice? Call us anytime!**

Tel.: (+420) 778 707 028

[www.labona.eu](http://www.labona.eu)

labona